

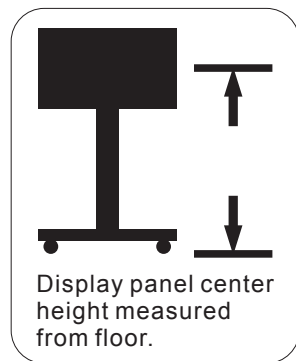


13. Adjustment

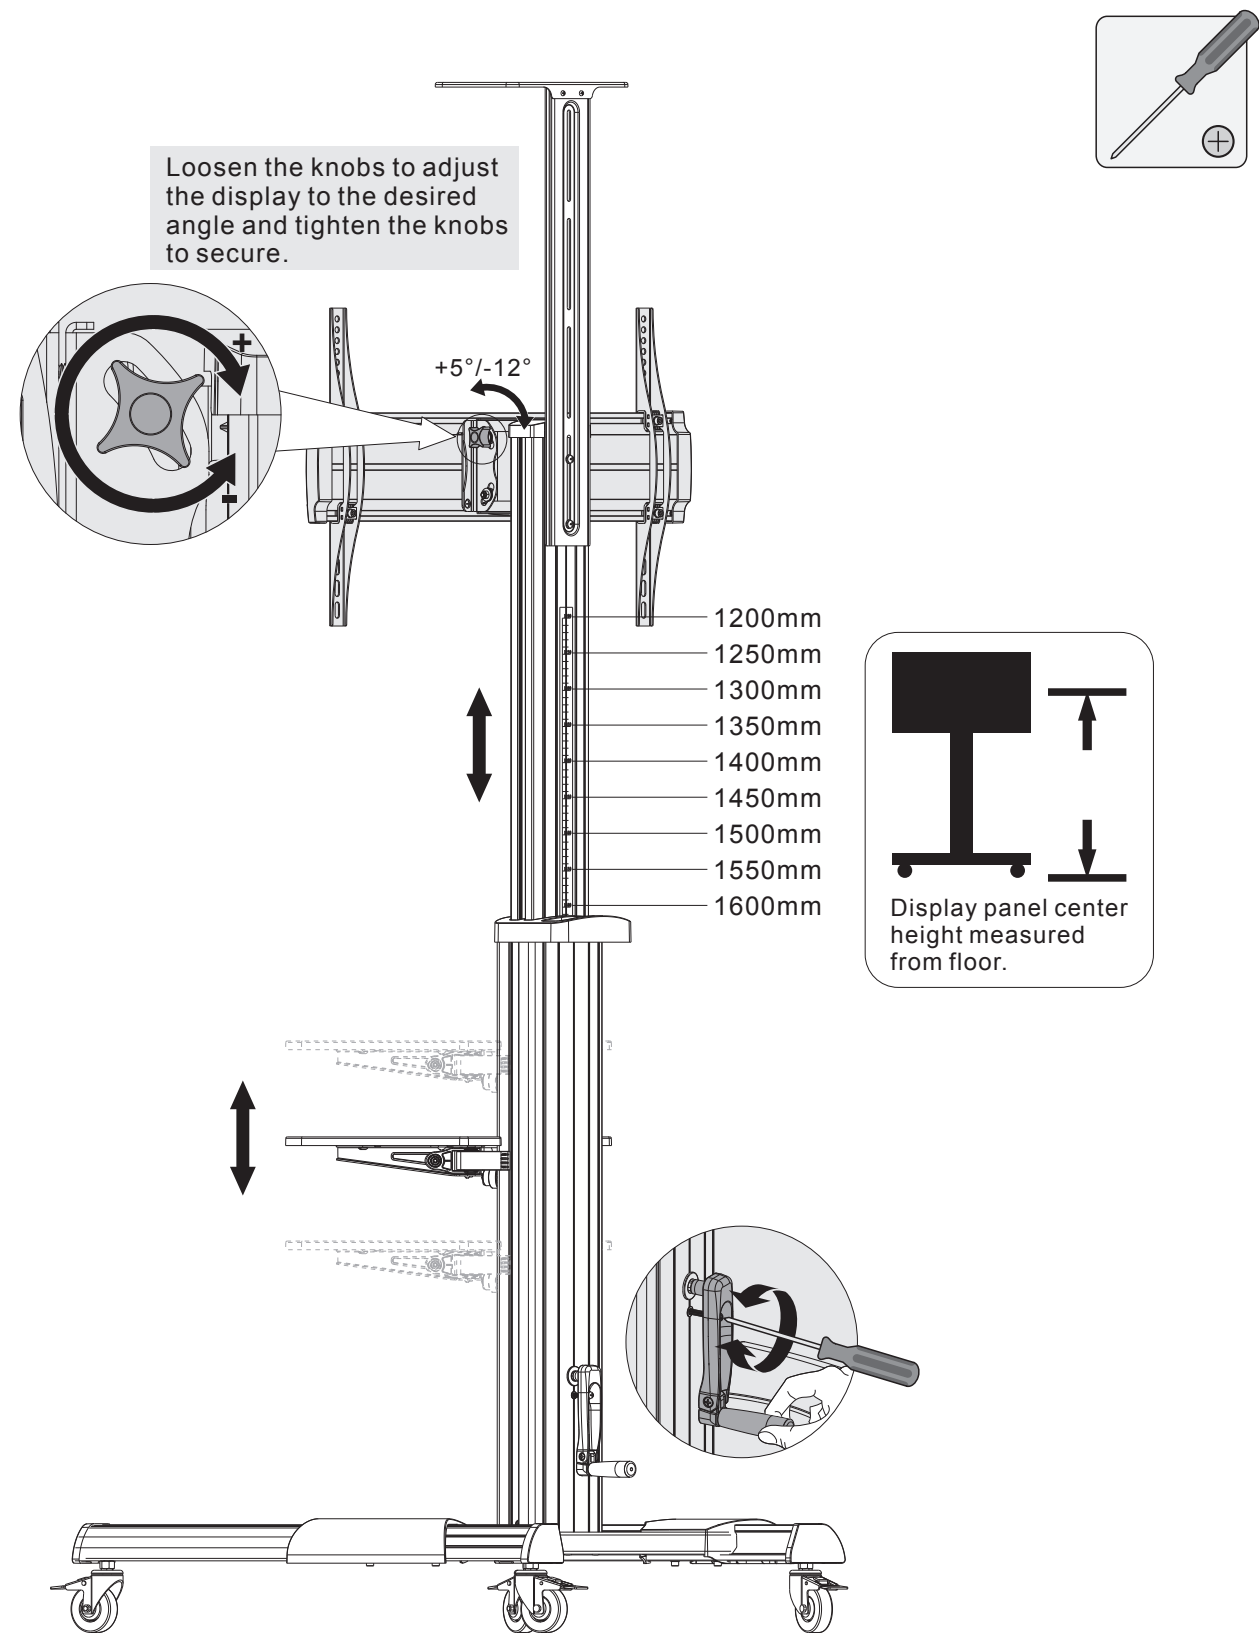

TV Cart

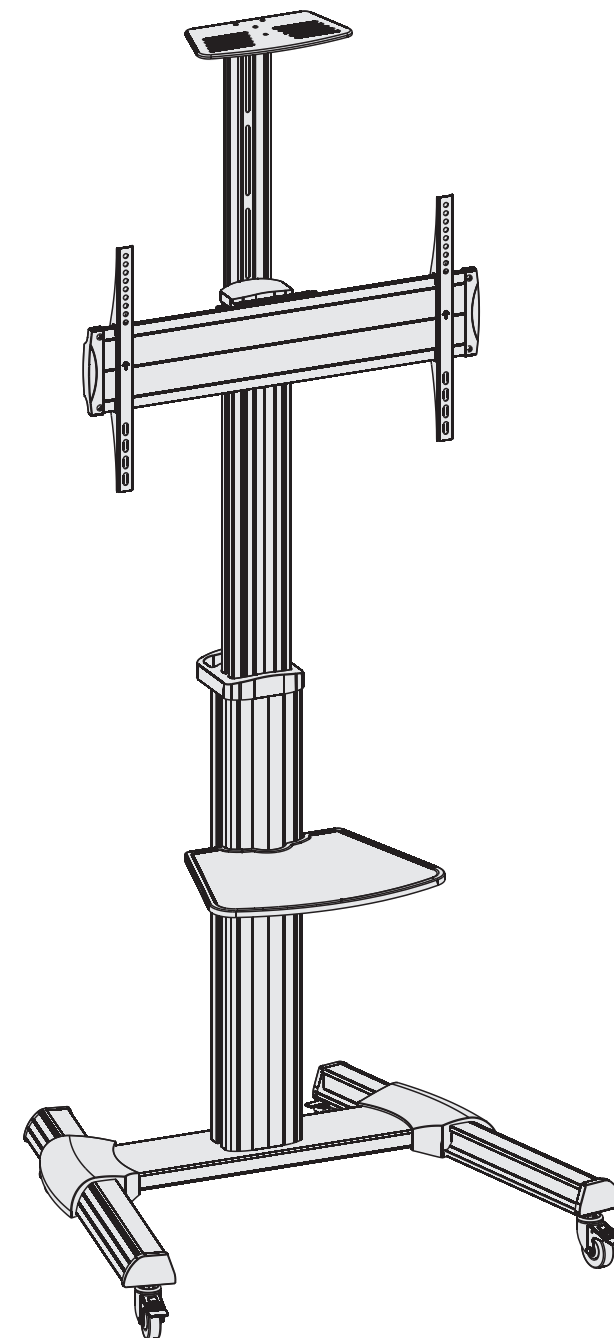

INSTALLATION MANUAL

TTV04H-44TW



200x200/300x300
400x200/400x400



rated
for TV
50kg/110lbs

rated
for DVD
5kg/11lbs

rated
for CAMERA
5kg/11lbs

TTV04H-46TW



200x200/300x300
400x200/400x400
600x400



rated
for TV
50kg/110lbs

rated
for DVD
5kg/11lbs

rated
for CAMERA
5kg/11lbs

Maintenance

- Check if the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

 **Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.**



CAUTION

- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and **DO NOT OVER TIGHTEN** mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Requirement for Installation




Component Checklist

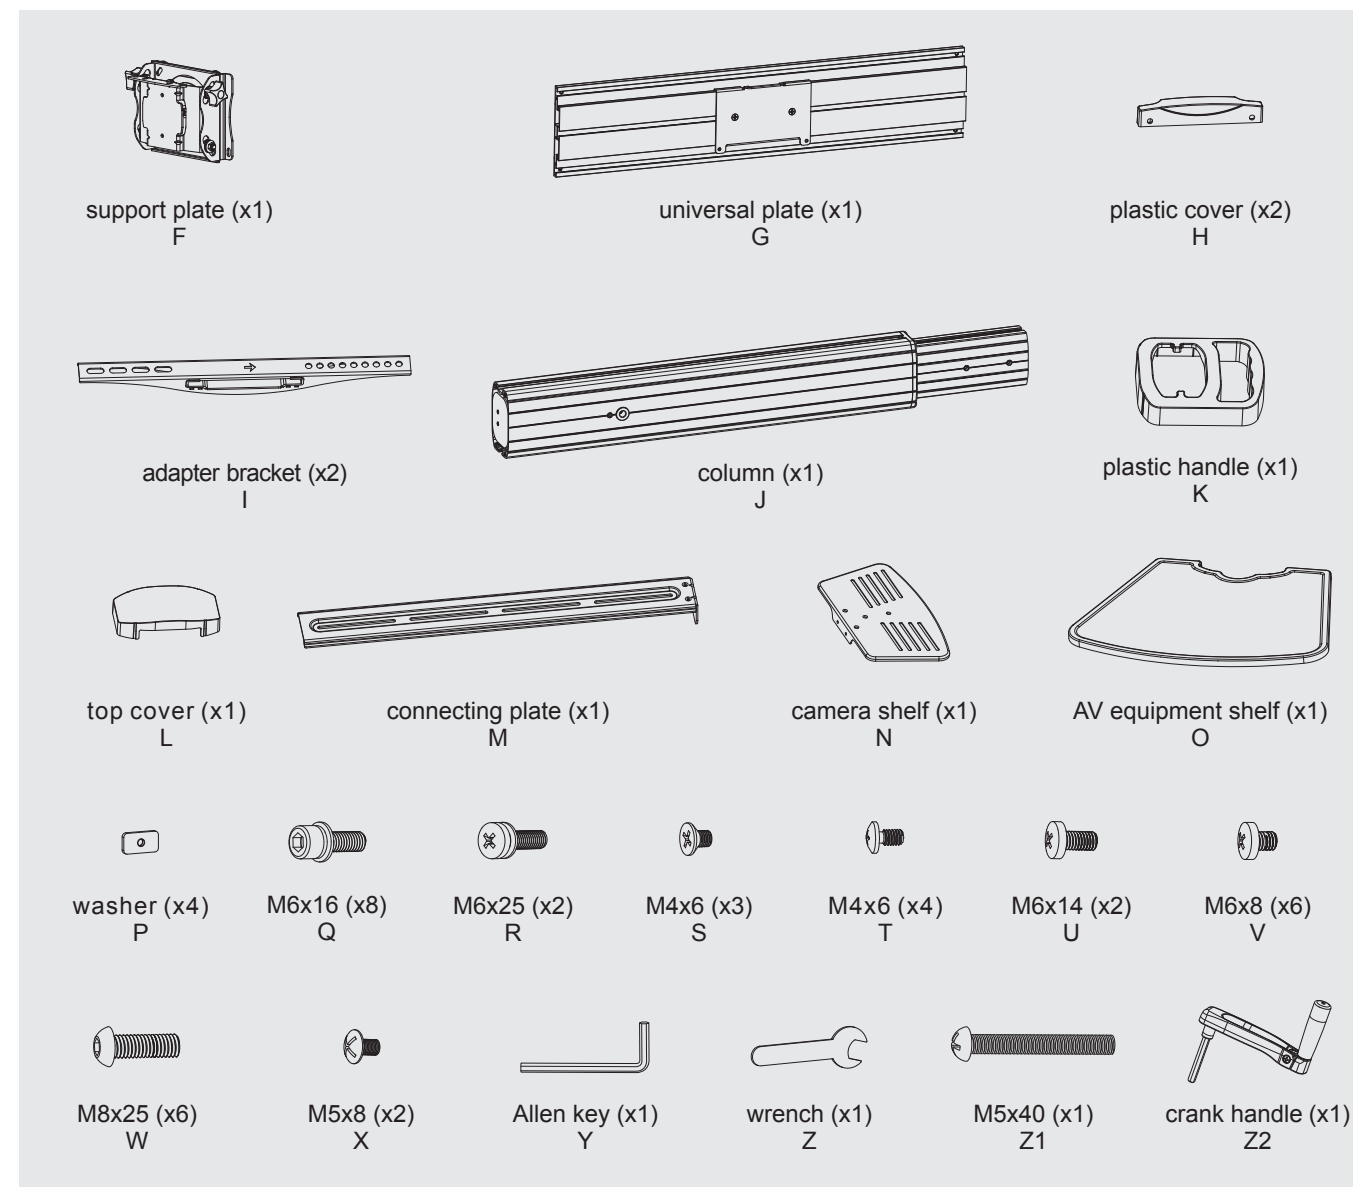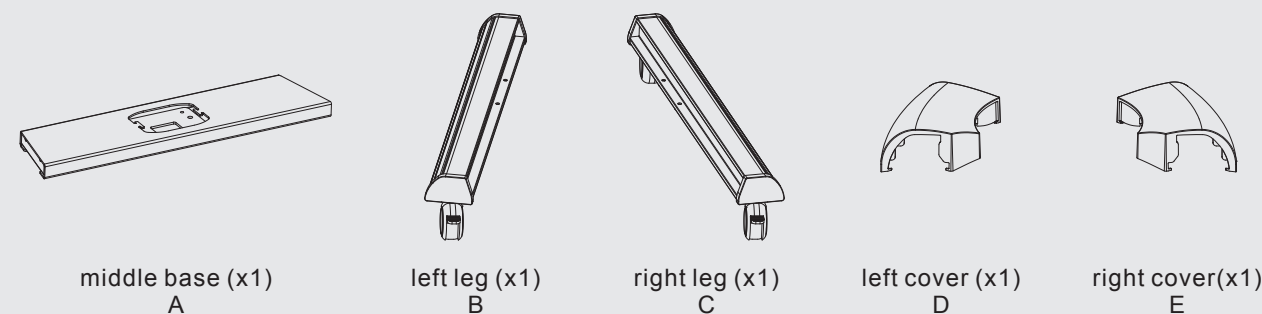


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

Package M

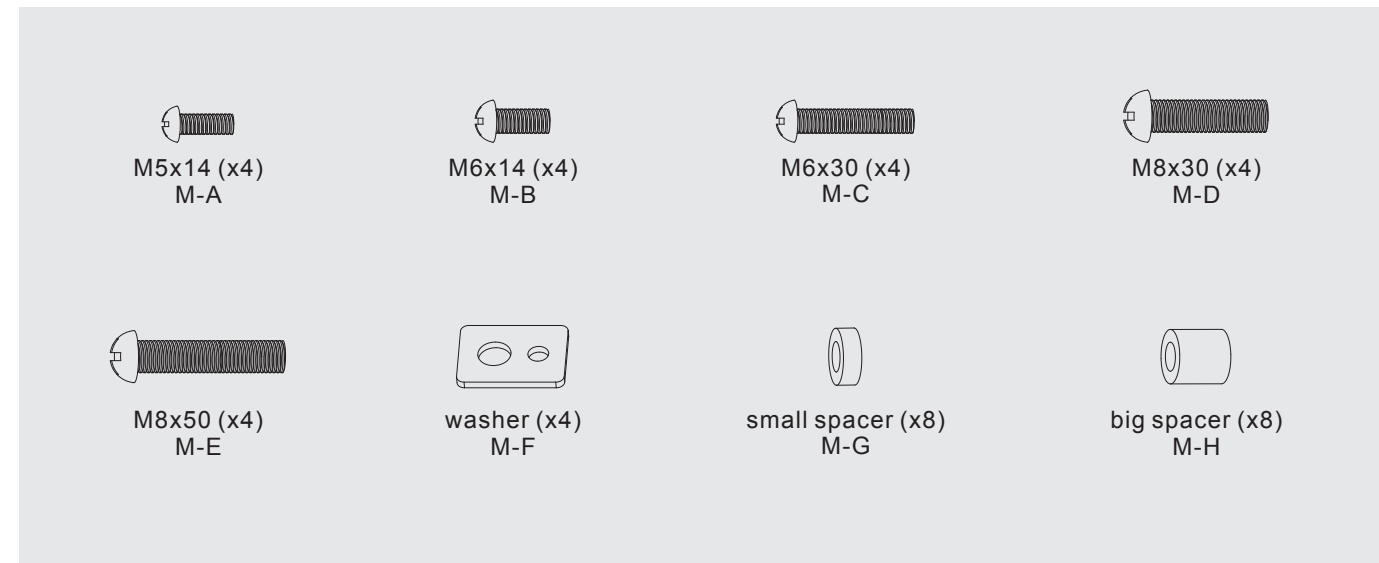


1. Assemble the Base

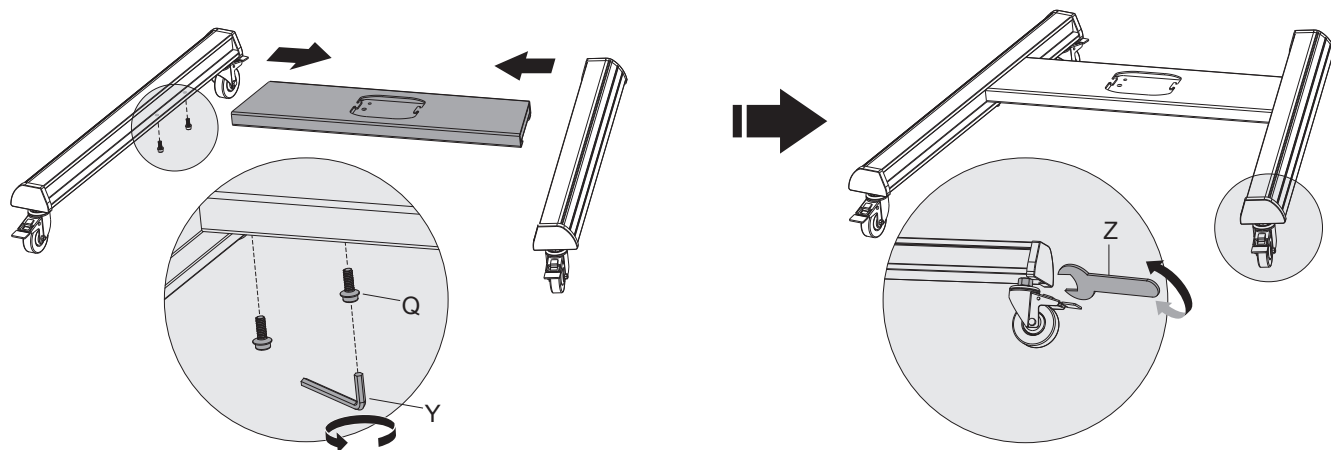


- Insert the right leg into the base. Align the holes in the right leg to the holes in the base. Secure with the screws. Repeat this step for the left leg.
- Each castor can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.

2. Attach Column to the Base

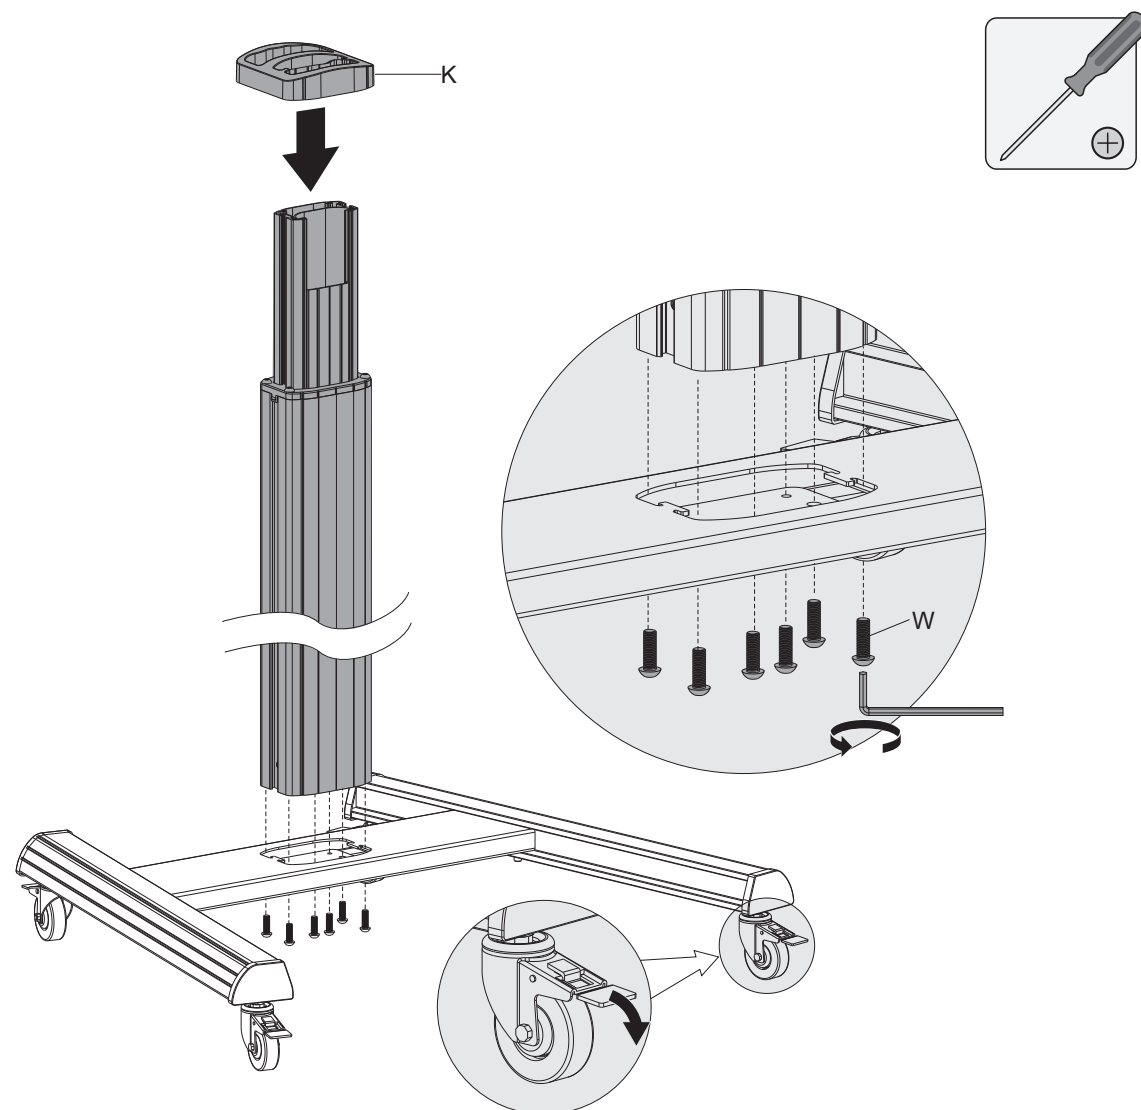


Attach the column to the base using the screws. Tighten all screws using an Allen key.

3. Adjust the Column

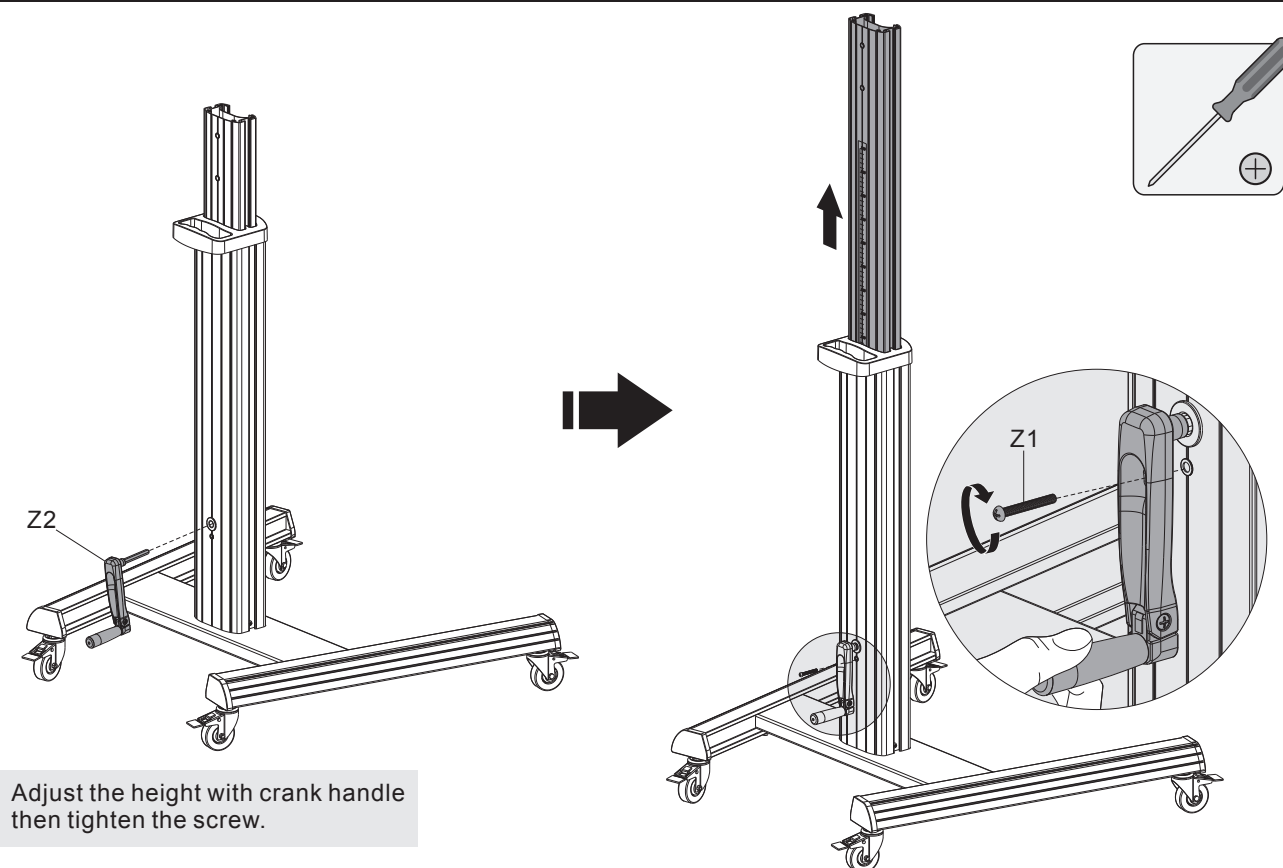


Adjust the height with crank handle then tighten the screw.

4. Install the Cover

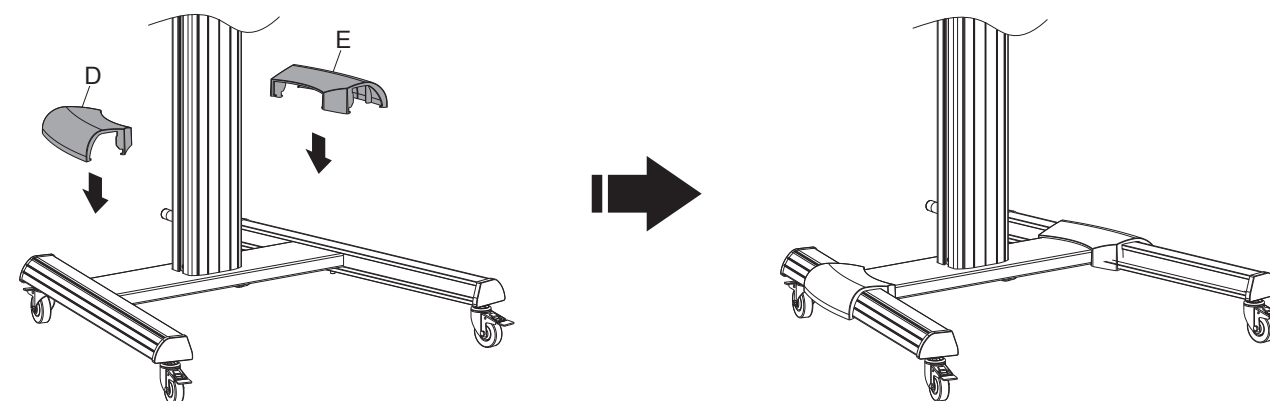


5. Attach the Support Plate

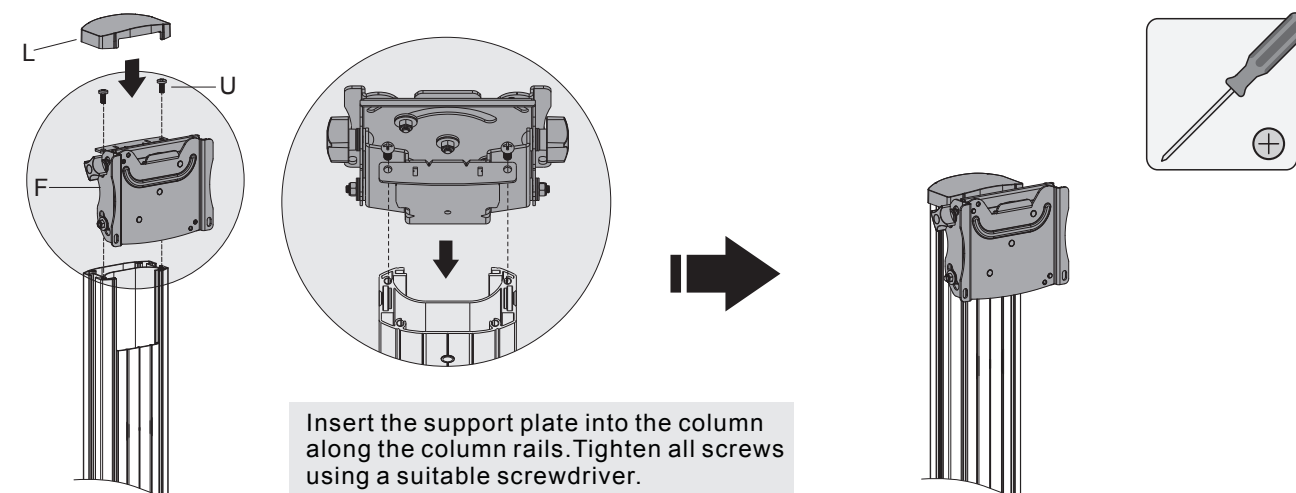


Insert the support plate into the column along the column rails. Tighten all screws using a suitable screwdriver.



6. Assemble the Universal Plate

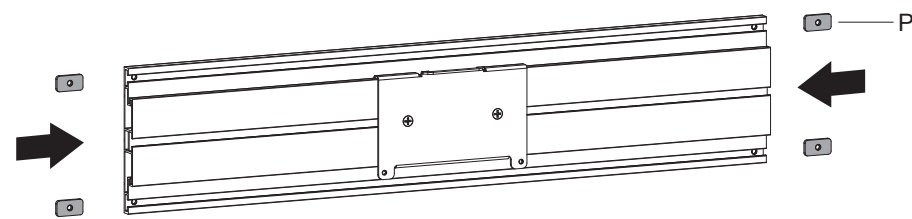

Insert the washers into the back of universal plate along the plate rails.

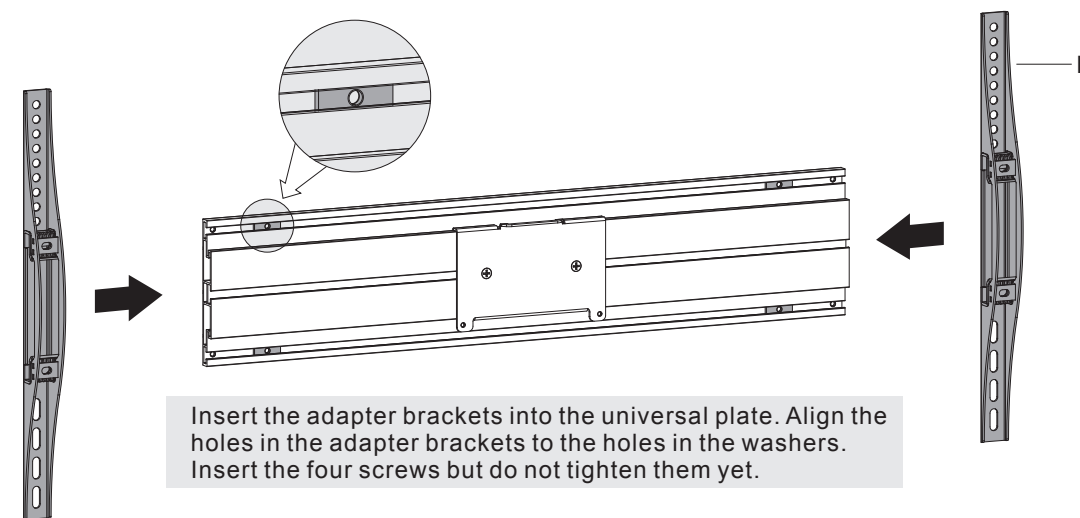


Insert the adapter brackets into the universal plate. Align the holes in the adapter brackets to the holes in the washers. Insert the four screws but do not tighten them yet.

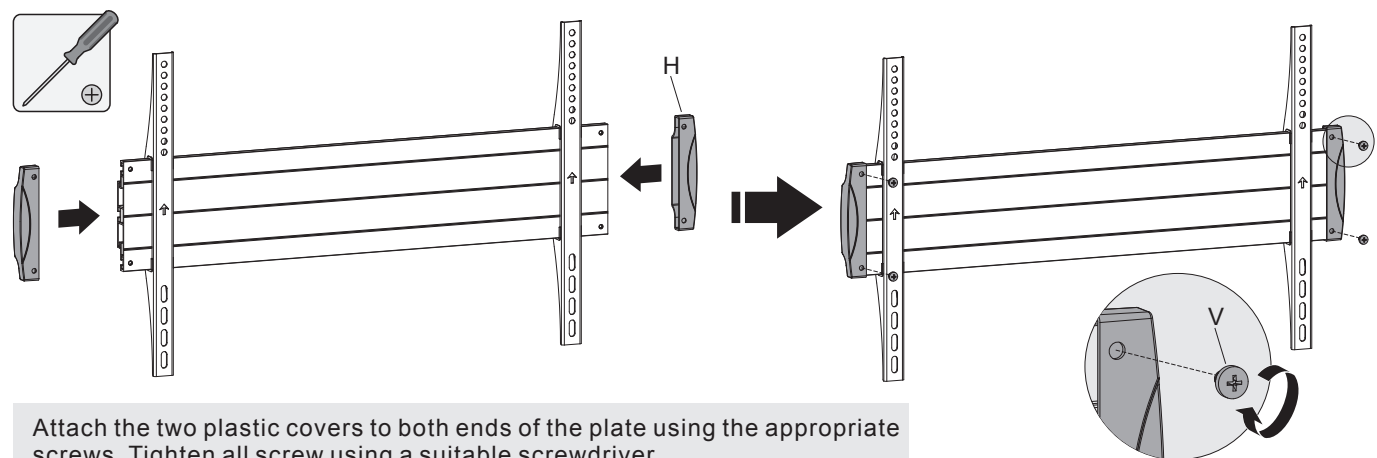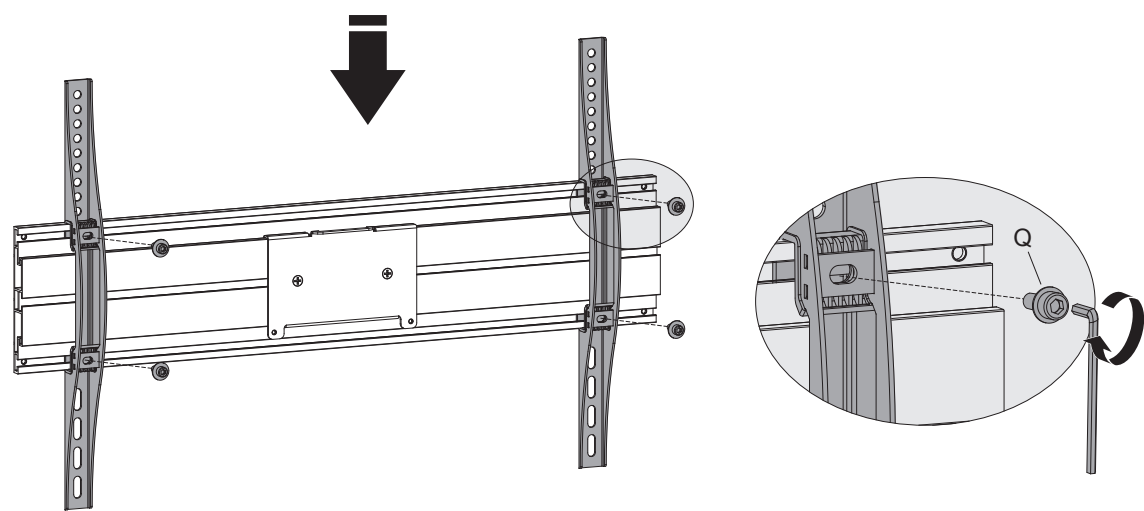




Attach the two plastic covers to both ends of the plate using the appropriate screws. Tighten all screw using a suitable screwdriver.

7. Installing the Adapter Brackets

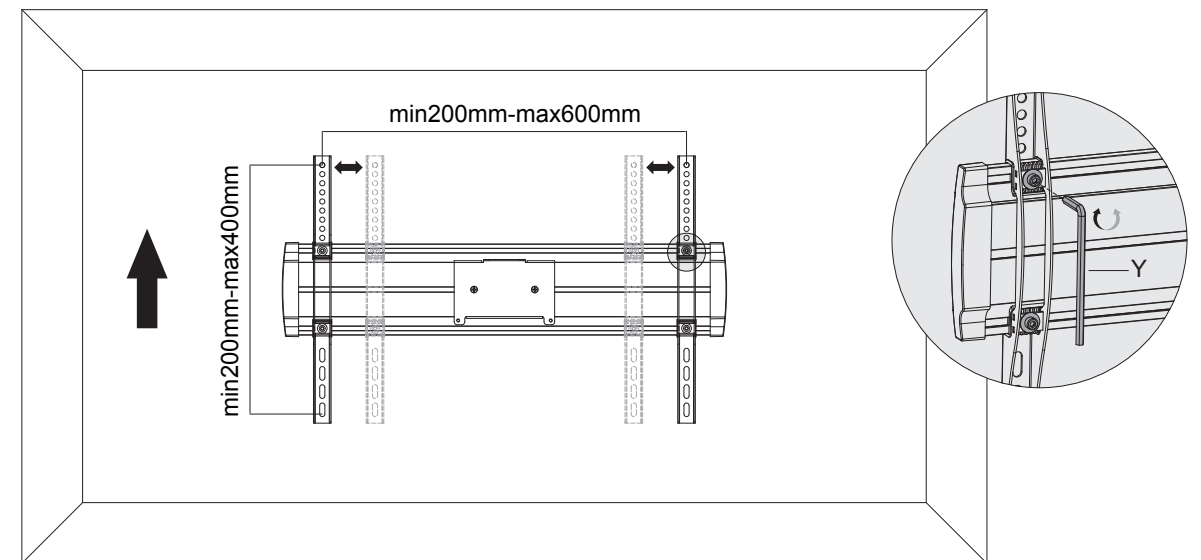


Adjust the adapter brackets to fit the hole pattern of your display. Then tighten all screws with an Allen key.
NOTE: Verify the proper alignment of all holes.

7a. Attach TV Bracket to Flat Back Screen

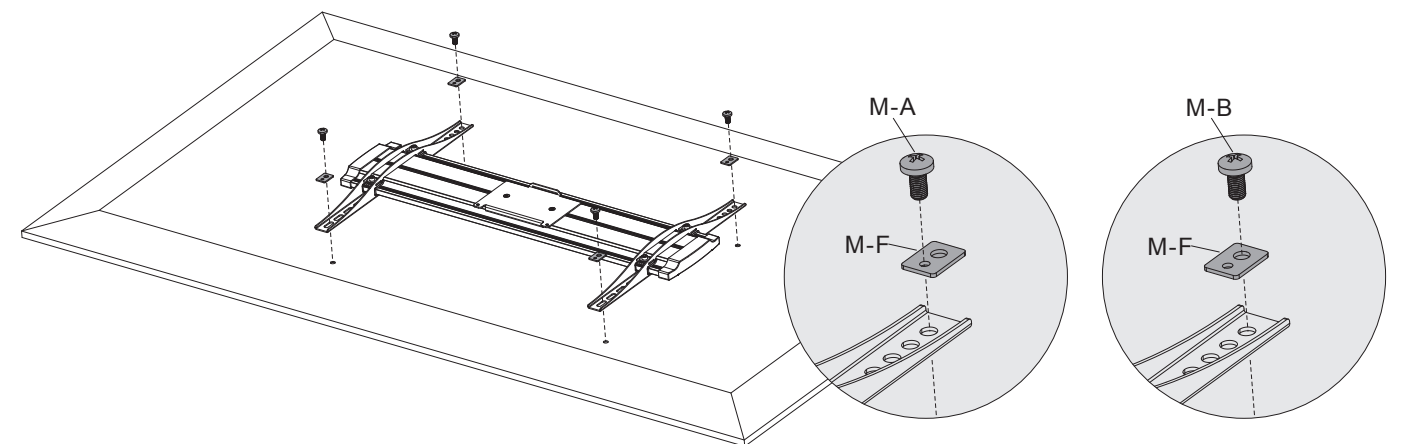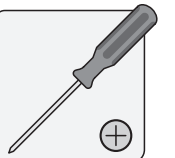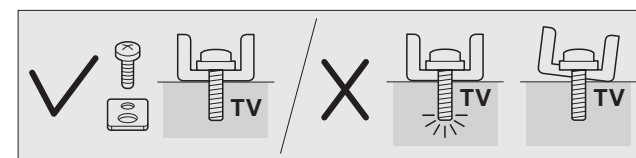

M-A		M-B		1:1
M-F				

7b. Attach TV Bracket to Curved or Recessed Back Screen

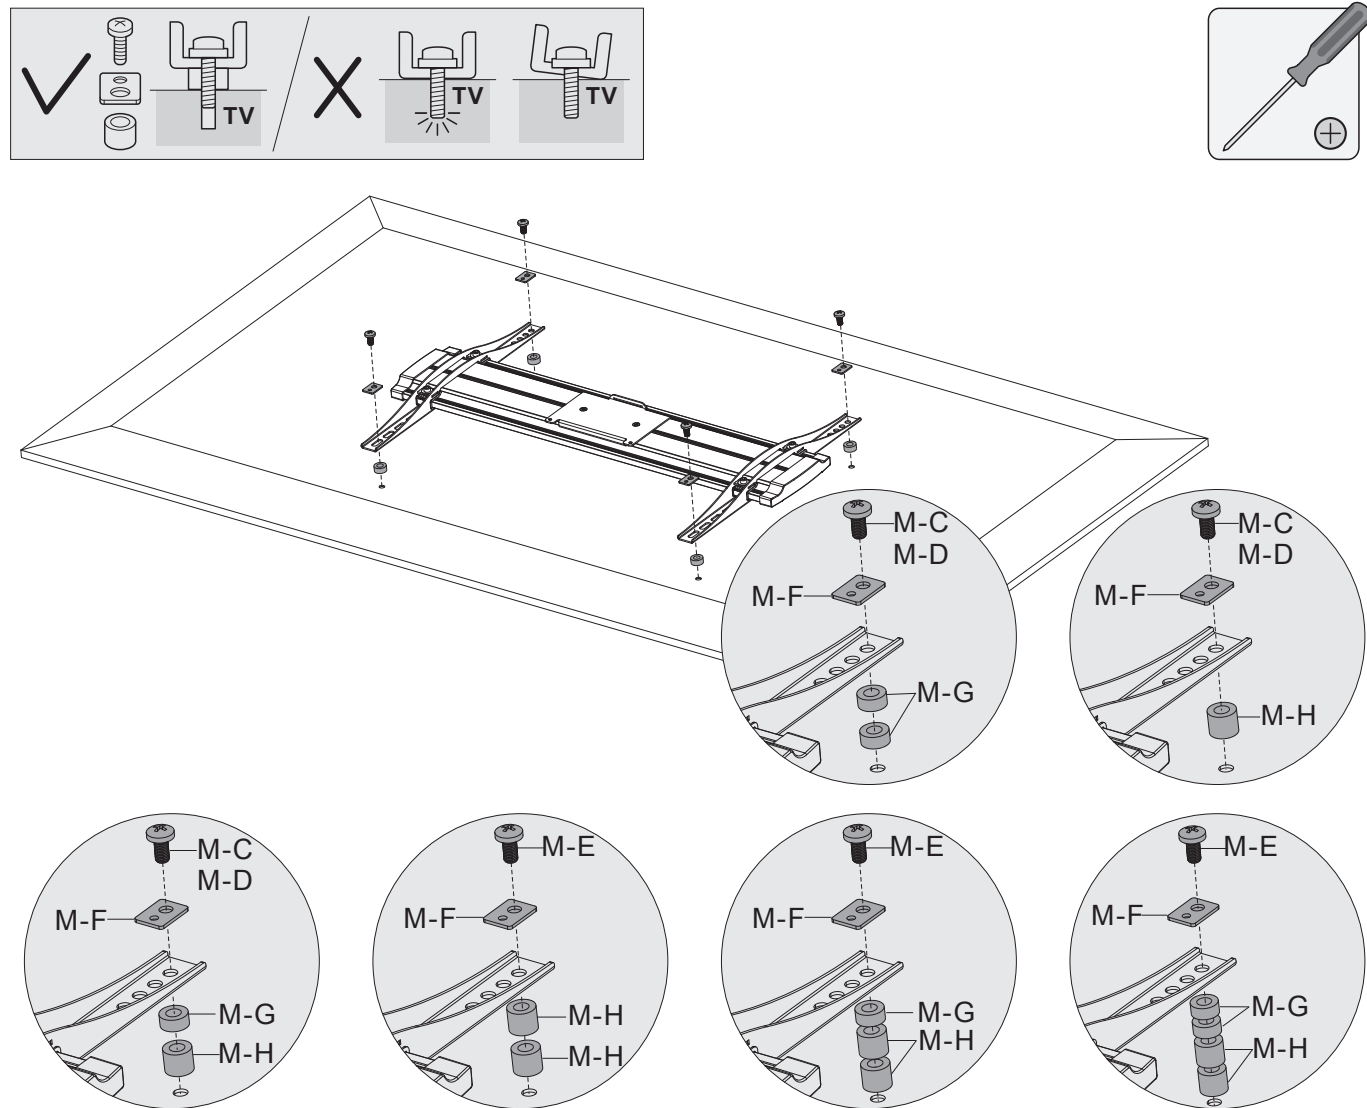


M-C 		M-D 	
M-E 		M-F 	
M-G 		M-H 	

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Position the adapter brackets as close as possible to the center of the display.
- Screw the adapter brackets onto the display.


⚠ Tighten all screws but do not over tighten.

8. Hang the Screen

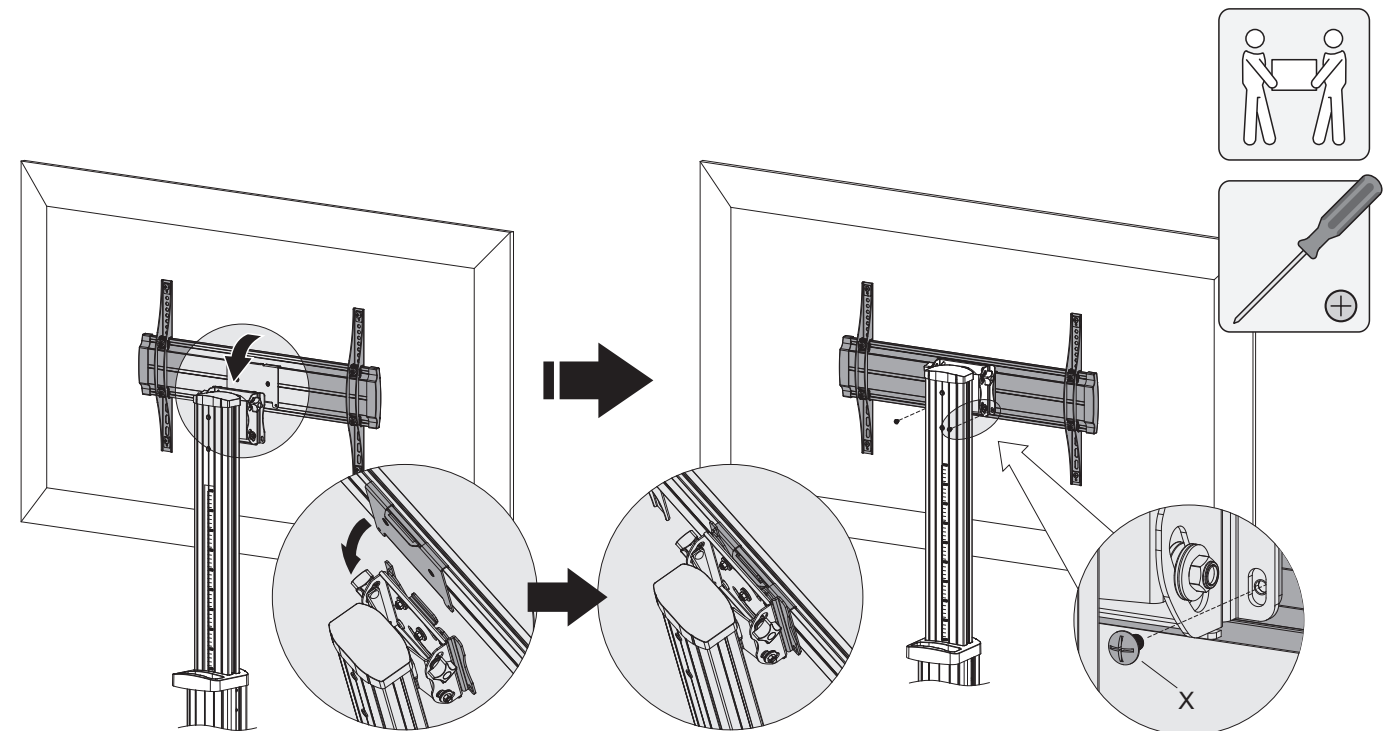


- Hook the universal plate onto the support plate.
 - Tighten two screws to secure them.
- IMPORTANT:** Make sure the display is mounted correctly, and that the screws are tightened safely before releasing the display.


9. Assemble the AV Equipment Shelf

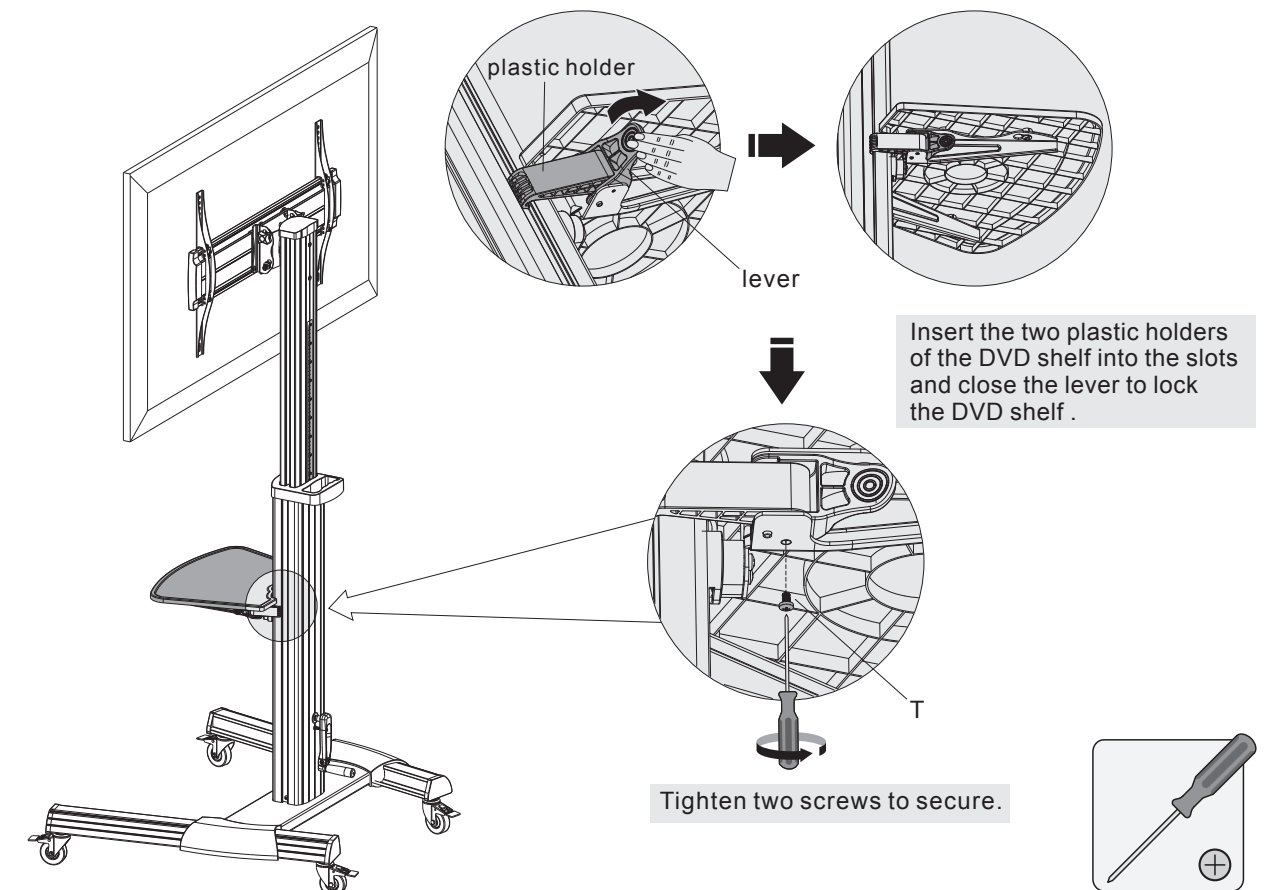


10. Attach the Camera Shelf

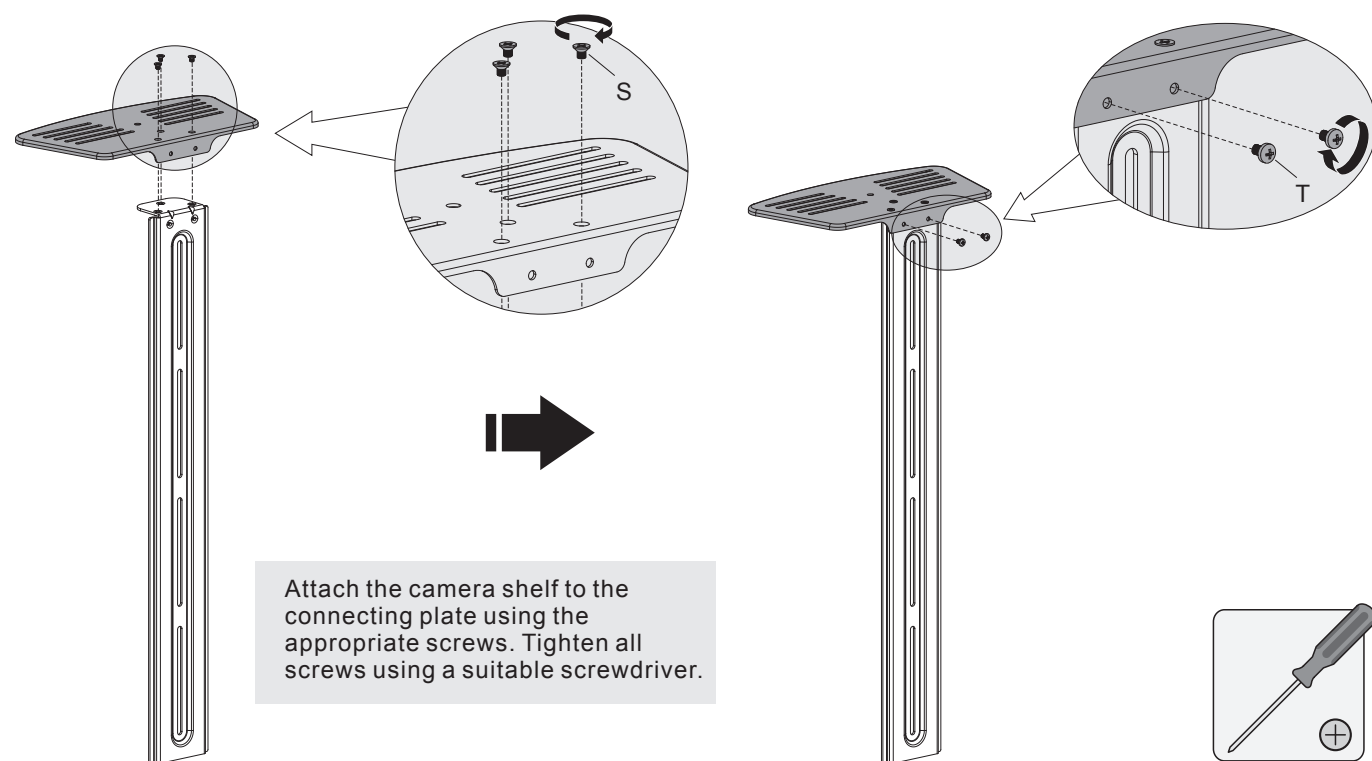

11. Installing the Connecting Plate

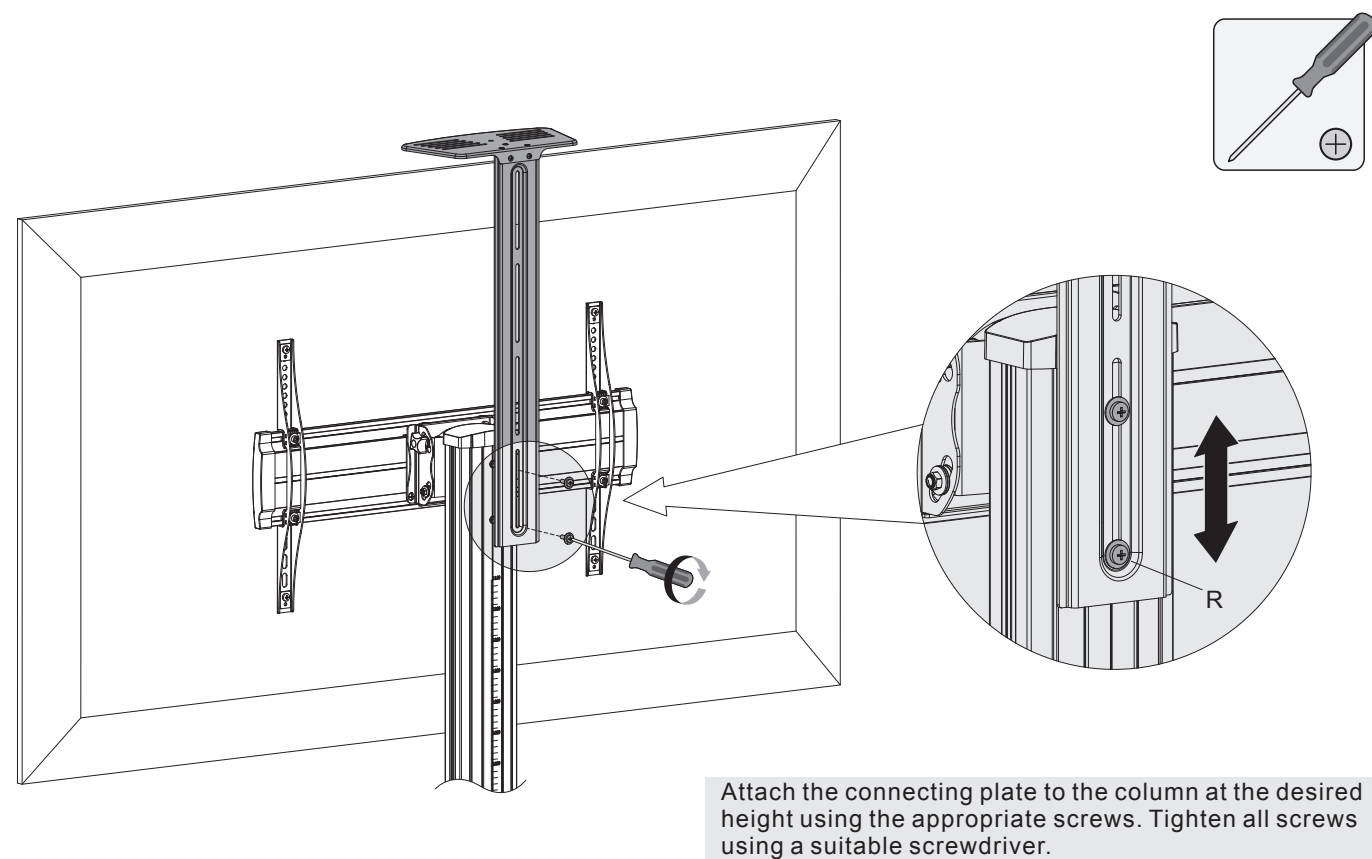

12. Display Orientation

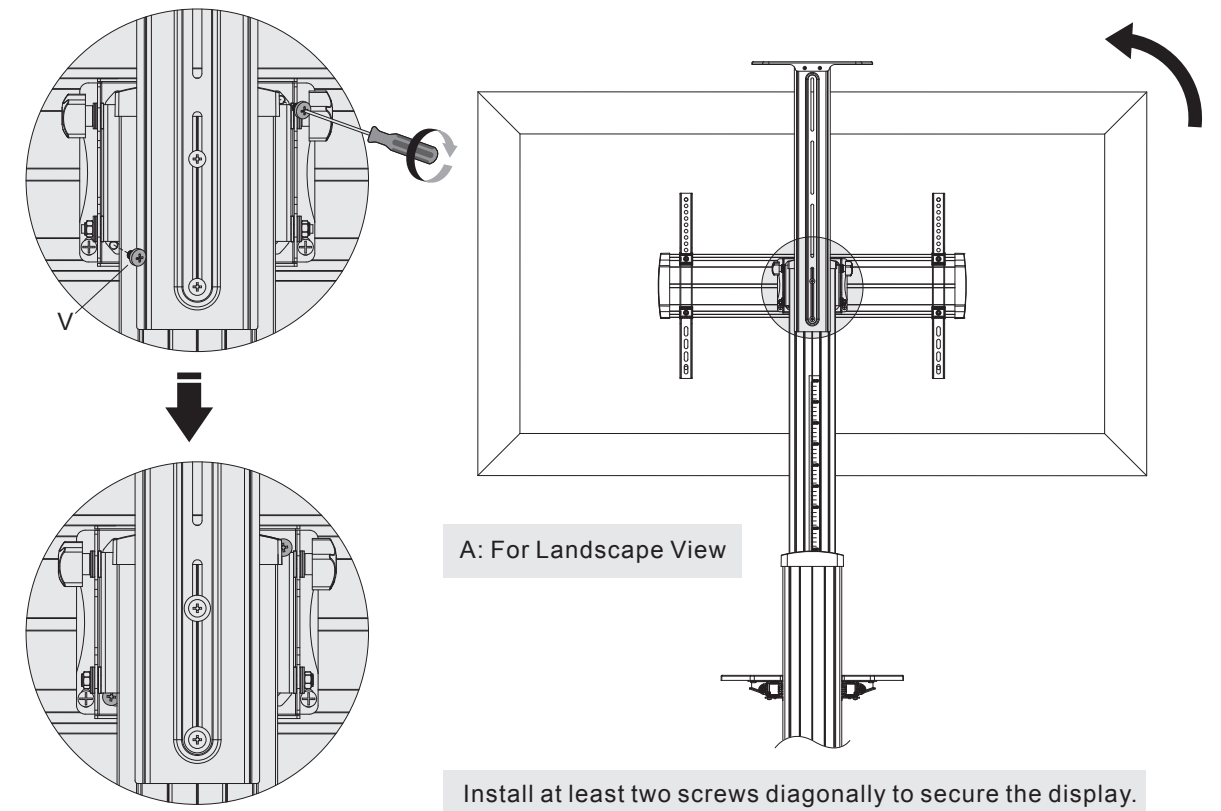

or

